

MYSTERE MXP 150

TYPE I



To make an ambulance that can take on extreme conditions, you have to be extremely demanding when you build it.

Demers Type I MXP ambulances are handling extreme conditions, from desert heat to icy mountain roads to the urban jungles of North America. Configured for a 4x4 or 4x2 truck chassis, the MXP 150 is our first to combine a rugged exterior with top-of-the-line design details, like greater insulation and isolation from the harsh elements.

And detail by detail, Demers has been raising the bar, in an industry where every detail matters.

CHASSIS

Available on Ford F350 & F450 4x4

- > Engine: 6.7 liter Power Stroke Diesel V8 Engine
- > Wheelbase: 165" (447 cm)
- > GVWR: Up to 16,500 lbs (7,484 kg)
(Gross Vehicle Weight Rating)


Available on GM Silverado 3500 HD 2WD or 4WD

- > Engine: 6.6 liter Duramax V8 Turbodiesel
- > Wheelbase: 162" (439 cm)
- > GVWR: Up to 13,000 lbs (5,897 kg)
(Gross Vehicle Weight Rating)



Ford is a registered trademark of Ford Motor Company, Limited. All rights reserved.
Chevrolet is a registered trademark of General Motors Company. All rights reserved.



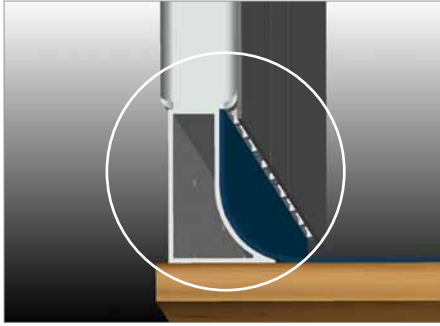

2



4



5



6

FEATURES

- > Aerodynamic roof design with incorporated full LED warning lights (2 clear & 4 red) for greater safety and fuel cost savings.
 - > Superior insulation from the elements for occupants' comfort.
 - > The NEW tinted Demers Applied Flush Mount Windows engineered for ambulances requirements on rear and side doors provide much more natural light inside the vehicle, more visibility to the outside, easier to clean, higher durability & improved aesthetics. [4](#)
 - > 72" interior headroom. 150" L x 95" W modular body, an all-aluminum structure, fully welded, with single sheet side wall, roof & floor.
 - > Best in class payload capacity: up to 5,000 lbs (2,268 kg) for a F450 and 2,000 lbs (907 kg) for a F350 offering additional capacity for equipment.
 - > Lightweight cabinetry construction combining Demers-exclusive "Interlock" rounded aluminum extrusion with modular fiberglass cabinet inserts, integrated LED lighting & shatterproof doors for a safer work environment, long-lasting interior and better fuel economy.
- > Standard Demers Electronic Multiplex System offering full operational flexibility to easily customize the vehicle's electronic functions to specific needs. Service 24/7; Unique Remote Access by a Demers specialist to diagnose & download solutions.
 - > NEW Exclusive Demers Diffusion AIRFLOW System; integrated heating system projecting heat below the medical cabinet allowing the airflow across the floor, deflecting on the walls in a diffuse fashion for gentle heating (no direct air stream on occupant). [1](#) [2](#)
 - > NEW Separate A/C ducted across the ceiling diffusing the air with adjustable vents. Construction with 5 independent air distribution pipes to assure equal pressure in each vents. [3](#)
 - > Exclusive Heads-Up Console (HUC) on dashboard provides easy access to ambulance features while letting drivers keep their eyes on the road for increased safety. [5](#)
- > Sub-floor marine grade plywood with lap joint construction to eliminate floor cracking. Strong, durable aluminum extrusions with permanent rolled edge provide the foundation for mounting the cabinetry and squad bench, increase safety by minimizing bacterial infiltration while supporting the rolled edge flooring material.
 - > Spacious front cabin with standard pass-through window view to module (Unique Option: crawl through with pivoting door).
 - > Emergency door override system increases occupant safety in case of evacuation after an accident. Electric door locks on all doors with remote.
 - > Dual seal protection safeguards onboard environment from outside contamination. Door latch protection for long durability.
 - > 30" stainless steel corner and front outside module protector.
 - > Multiple exterior stowage compartments: Main oxygen tank, Backboards and scoop, OEM battery, Spare tire, Electrical compartment with additional stowage.
 - > Squad bench for 3 paramedics and NEW fitted cushion. [6](#)

Plus multiple options to build the Mystere MXP 150 your way.

To know more about the Mystere MXP 150 ambulance, find all the details at www.demers-ambulances.com

Or, please contact us directly at **1-800-363-7591** to speak to one of our sales representatives or to be redirected to your local dealer.

THE DEMERS DIFFERENCE

Demers' 50 years of experience and customer feedback have led to continual upgrades, improvements and innovations, driven by the philosophy that every single detail contributes to a superior vehicle. Details that today make Demers ambulances some of the safest on the road, and that deliver significant and tangible added value in terms of safety, ingenious design and ergonomics, along with low operating costs. Detail by detail, Demers has been raising the bar, making ambulances which exceed the sum of their parts and are standouts in the industry. Ambulances engineered to keep your people safe. So they can keep on saving lives.

