

# **MXP153**

## **ARCTIC RANGE EDITION**

**KEEP YOUR COOL IN ANY SITUATION  
LIVES DEPEND ON IT.**



---

**PREMIUM INSULATION PACKAGE  
AND CLIMATE CONTROL**

---



**MXP153.com | 800-363-7591**






# MXP153

## ARCTIC RANGE EDITION

FEATURING A **PREMIUM**  
INSULATION PACKAGE  
& CLIMATE CONTROL




Our coldest HVAC system EVER! The Texas lab-tested independent heat and A/C direct flow air conditioning system results in exceptional speed to reach comfortable interior temperatures. Twin evaporator coils with brushless motors, combined with our Premium insulation package and standard dual seal doors, gets you cool fast and stays cool. The design maintains module air temperatures at the optimal level, even with frequent door openings and closures, in the most extreme climates.

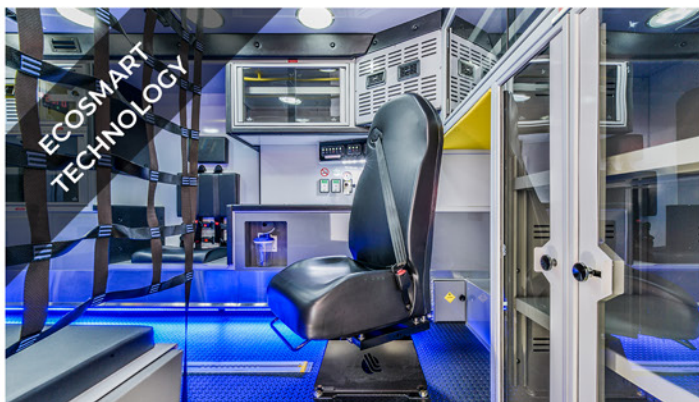

Proven and tested since 2008, Demers' ECOSmart electrical system continuously monitor's the ambulance voltage and rear module temperature to stop and restart the engine automatically - when the unit is parked, and running in non-emergency mode. Demers ECOSmart Technologies significantly reduces fuel costs and impact on CO<sub>2</sub> released in the environment.



The industry's most efficient insulation package, using state of the art refrigerator technology, is engineered with polyurethane closed-cell insulation, sealed inside the wall structure, and a thermal barrier covers all metal surfaces to limit heat exchange from the exterior to the inside module. It also provides a clean, durable, environmentally safe insulation with pre-engineered service accessibility.

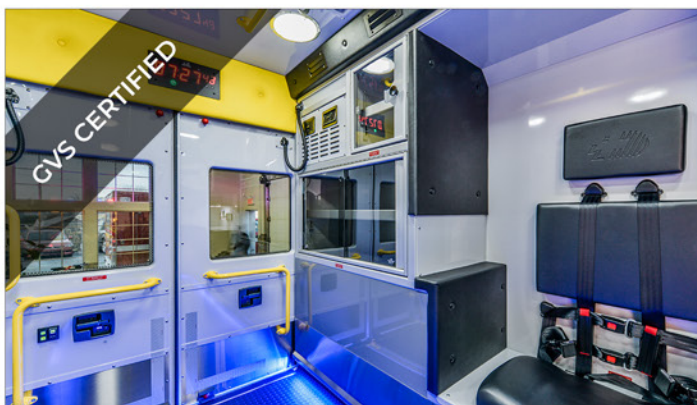

Our all-aluminum cabinet wall design is fully KKK-A-1822-F/GVS certified and exceeds AMD HVAC test requirements. Lightweight, durable, and pull-tested to 12,000 lbs for optimal safety and durability.

# NEVER COMPROMISE

[MXP153.com](http://MXP153.com) | 800-363-7591

